Clearspan®

PRS with Digi EX12

Revision Level: 0.1
January 19, 2026
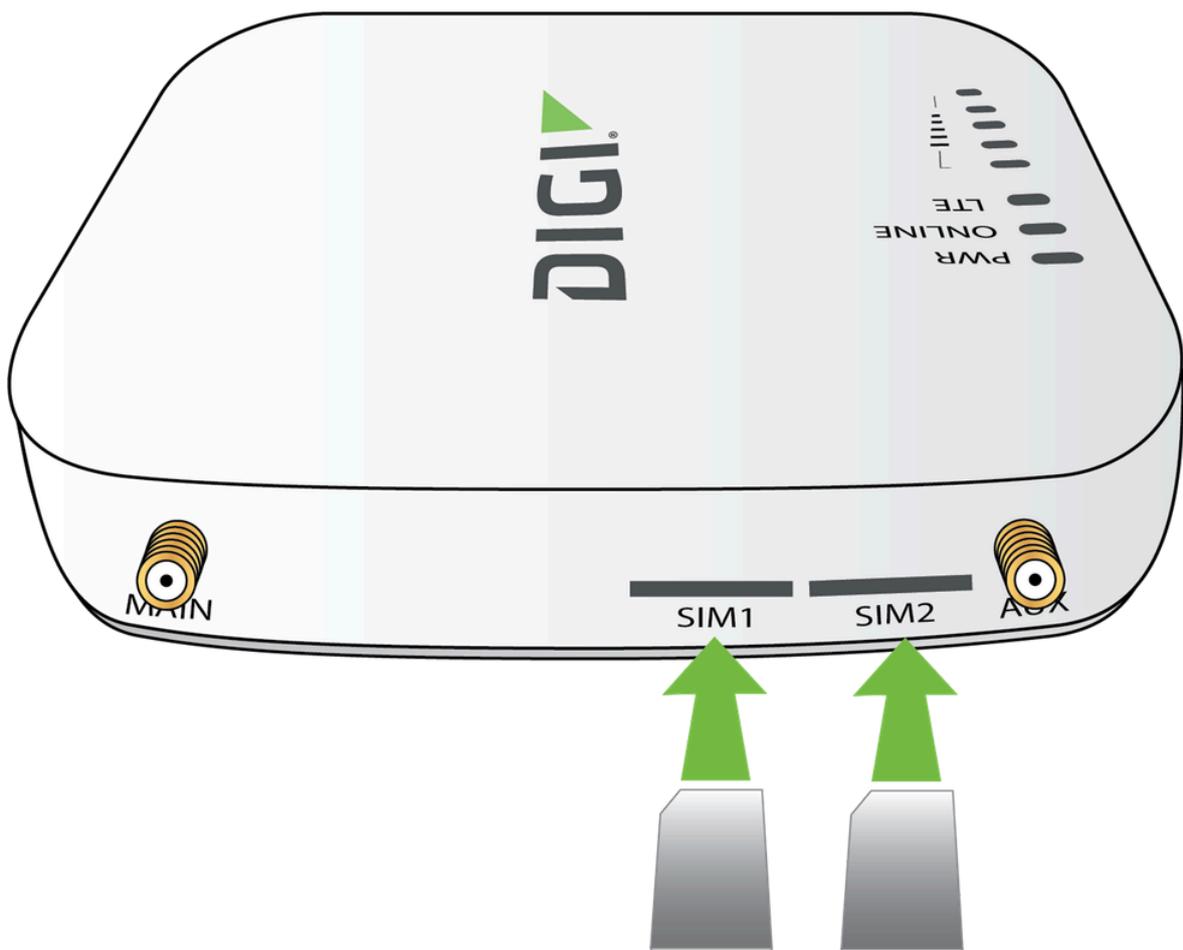
PRS with Digi EX12

Table of Contents

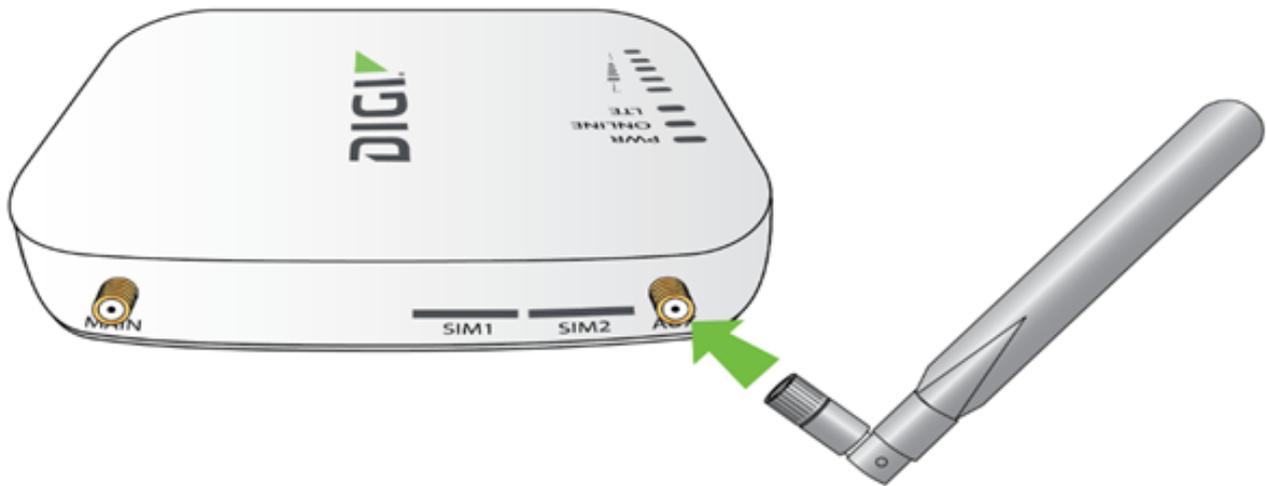# Setting up the PRS Hardware

Installing the SIM Card

1. Insert your activated SIM (2FF) card provided by your cellular carrier into the device.

    a. Insert the SIM card into the SIM 1 socket. Insert the end of the SIM card with the chamfered corner positioned as indicated. Push the SIM in until it clicks into place.
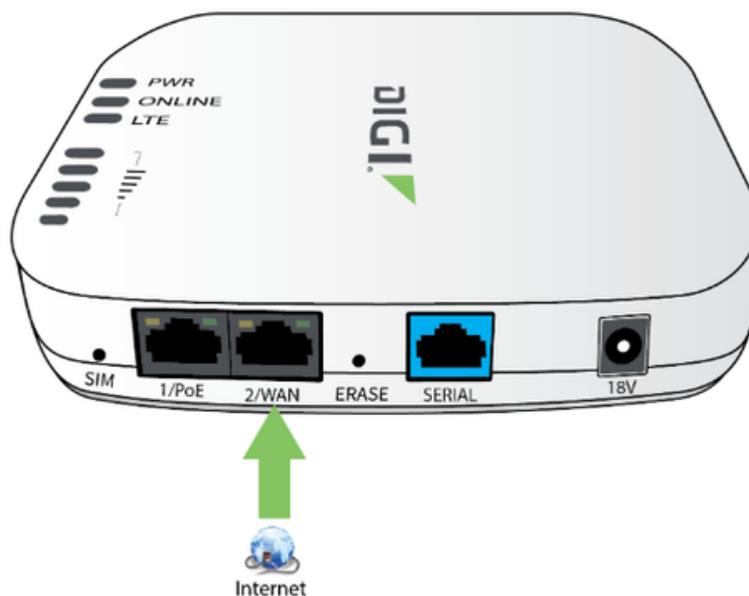
Installing the Antennas

Attach and hand-tighten the four cellular antennas to the MAIN, AUX or if external antenna needed, connect antennas as follows:

- **2×2 MIMO → use 2 cellular antennas**
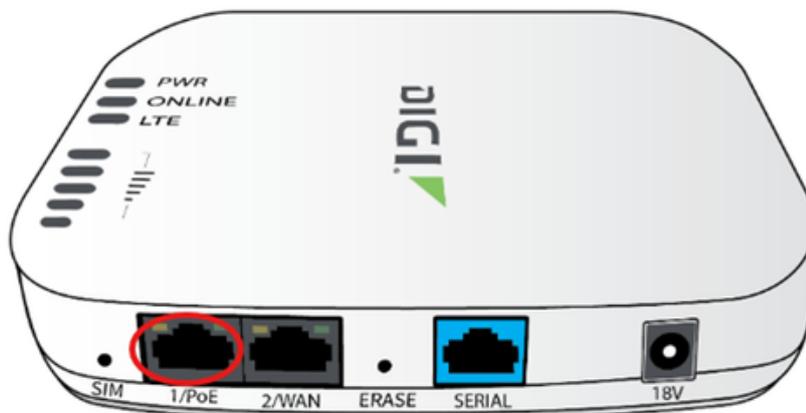- Connect to **MAIN** and **AUX**

Connecting the WAN Port

Connect Ethernet cable to 2/WAN port.

Connecting AudioCodes and Grandstream ATA's on the Digi EX12

Connect Ethernet cables to 1/POE on Digi EX12 to the following devices.

For Grandstream: Connect Ethernet cables on Grandstream 81X on NET1

For AudioCodes MP504 / MP508: Connect Ethernet cables on AudioCodes MP504 and MP508 to Blue WAN Port:

For AudioCodes MP524: Connect Ethernet cables on AudioCodes MP524 to Blue WAN 1

Power up Hardware

1. Power up Digi
2. Power up AudioCodes or Grandstream